


Installation instruction


For module:

PSXXXL8GFH-18/VNH;

Screw fitting: Use corrosion-proof screws in the existing installing holes in the module frame. Each module has 8 mounting holes for securing the module on the mounting rail. The module frame must be attached to a mounting rail using M8 corrosion-proof screws together with spring washers and flat washers in symmetrical locations on the module. The applied torque should be 16~20Nm.

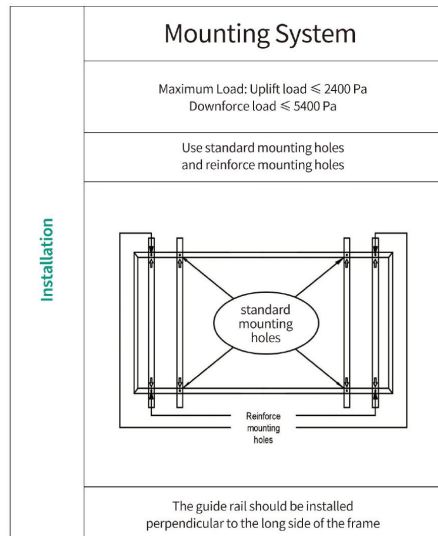

Clamp fitting: The module clamps should not come into contact with the front glass and must not deform the module frame. Avoid any shadowing effects from the module clamps. The module frame cannot be modified under any circumstances. Regardless of the orientation chosen, at least 4 clamps must be used on each module. Depending on the local wind and snow loads, additional clamps may be required. The applied torque should be about 16~20Nm:

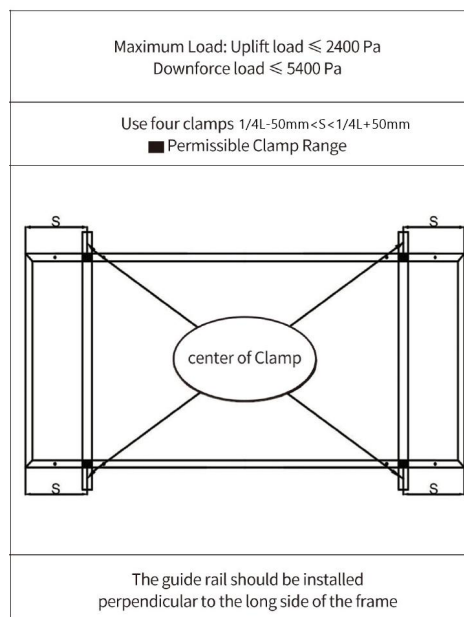

江苏辉伦太阳能科技有限公司

南京市浦口高新技术开发区星火路1号 邮编: 210032
 电话: +86 25 58642759 传真: +86 25 58638009
 网址: www.phonosolar.com
 邮箱: info@phonosolar.com

Phono Solar Technology Co., Ltd.

1 Xinghuo Road, Nanjing Hi-tech Zone, Nanjing, China PC: 210032
 Tel: +86 25 58642759 Fax: +86 25 58638009
 Web: www.phonosolar.com
 E-mail: info@phonosolar.com